Dahua Camera reset

1. Connect the camera to the computer, Download and install Dahua search tool "ConfigTool";





2. By searching tools, query the camera's IP address, click the web webpage

Ų	Configtool		1 0	evice(s) four	0	0			Deaich 6	etes - V	- ×
8	Nody P		shalae	Batch In	oth IP	Import E	igort Manual Add	Delete		+#101	9
0	Device Upgrade	0	80,	Status	Type	Model		MAC	Version	Operate	_
þ	Device Config	0	1	Initialized	PC	VD-2741-45	192 168 1 108	64 4c 36 56 4	14.78 V2.829.150	Est Ortal	Web
9	System Sellings										
1	PasswordReset										
	Building Config										
	CGI Protocol										
			fou ha	ve selected	s o devic	e(s)	lalized 🗾 Initialized	Ĺ	IPv4	Pis	

3. Open the camera and log in, click "Setting-System-Default-Factory Default"

IP Camera	Live	Playback	Setting	Alarm	Logout
▶ Camera Default					
Network					
Event Default Other configurations will be recovered to default except network IP address, user management and so on.					
Storage 4 Factory Default Completely recover device parameters to factory default.					
System 2					
> General					
> Account					
> Salety					
beaution of the second se					
> ang-ont_apont > Auto Matoda					
> Upgrade					
Information					

4. Enter the password to restore the factory settings

IP Camera		Live	Playback	Setting	Alarm	Logout
Camera Network Event Storage System > General	Output Other configurations will be recovered to default accept retrieve IP address, user management and so on. Factory Datest Completely recover device parameters to factory default.					
 Account Saday Colora Singert Equation Singert Equation Upgrade Upgrade Information 	Factory Default Factory Default Ford all parameter, place entry passed for confination. Usernance : doint 50m Catual					