



PG CAMERA FTP SETTING

1. Open ftp server and setting ftp IP address ,port,user name and password.

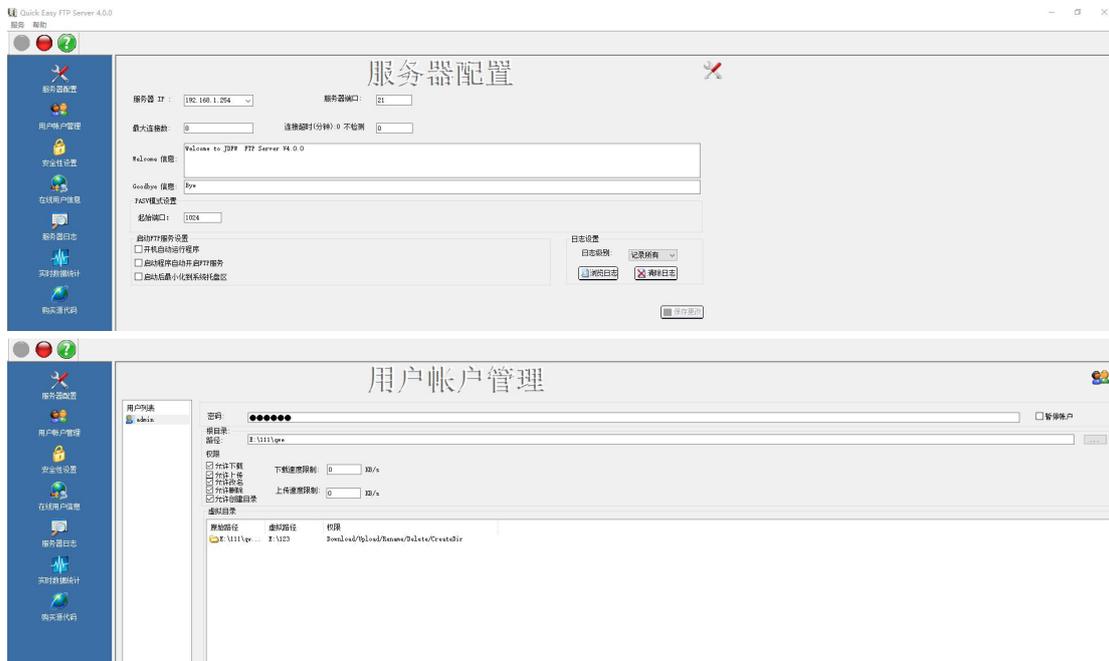

2. Open IE browser. Enter camera IP and login in camera web.

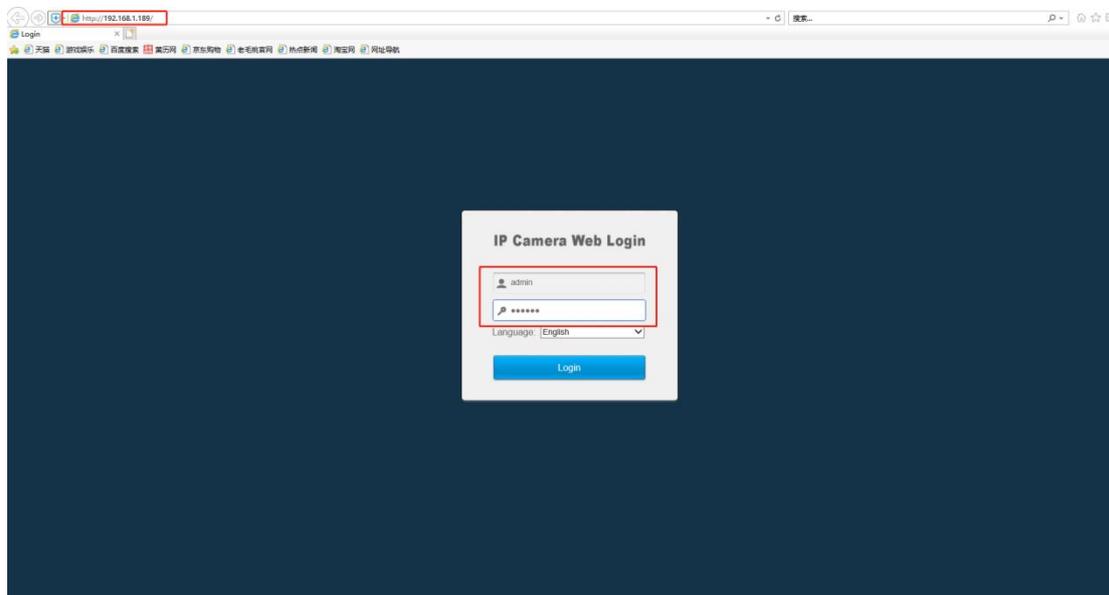

3. Click "configuration-Network-FTP".

- ① Enter FTP Server IP address.
- ② Enter FTP server port
- ③ Enter user name and password.
- ④ Enter file name to be sent
- ⑤ Click "save" to apply and click "Test" to verify that the setup is successful.

Live Playback Local Setup **Configuration** Alarm Logout

FTP

FTP Server 192.168.1.254
Port 21 (1-65535)
Username admin
Password *****
Confirm Password *****
Store Path alarm

Test
Reset Defaults Refresh Save

Camera
Network
Basic
Service Ports
POP
SMTP (Email)
FTP
Connect Check
PTZ
Event
Storage
System
Information